



Single Pedestal Broadcaster

Installation Instructions for
Single Pedestal Broadcaster



Tools Needed

- Tape Measure
- Safety Glasses
- Safety Gloves
- Screwdriver
- Drill
- Level

Hardware Needed

- All parts included

Installation

1. Remove all parts from box.
2. Insert screw (A) through base (B), and into post (C) and tighten screw.
3. Connect post flange of base assembly (C) to panel (F). Insert washers (E), and nuts (D), and tighten (see Figure 1).

How To Use Your Broadcaster:

1. Slide two top hinges (G) down and two bottom hinges (H) up.
2. Remove cover (I)
3. Insert art, menu, or sign (J).
4. Replace cover.
5. Slide two top hinges (G) up and two bottom hinges (H) down. Lock cover into place.


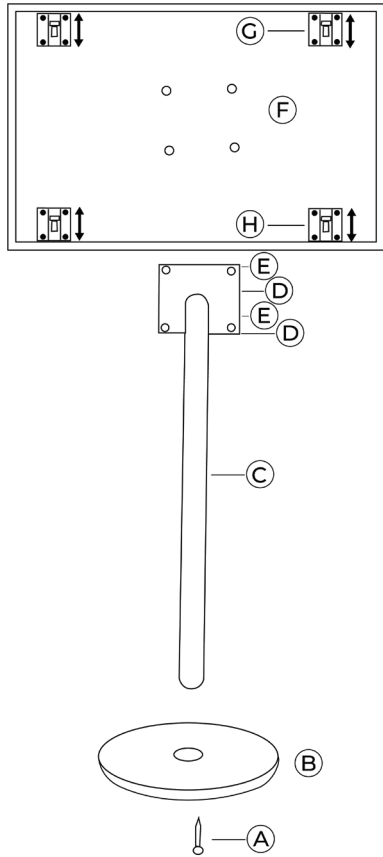


Figure 1

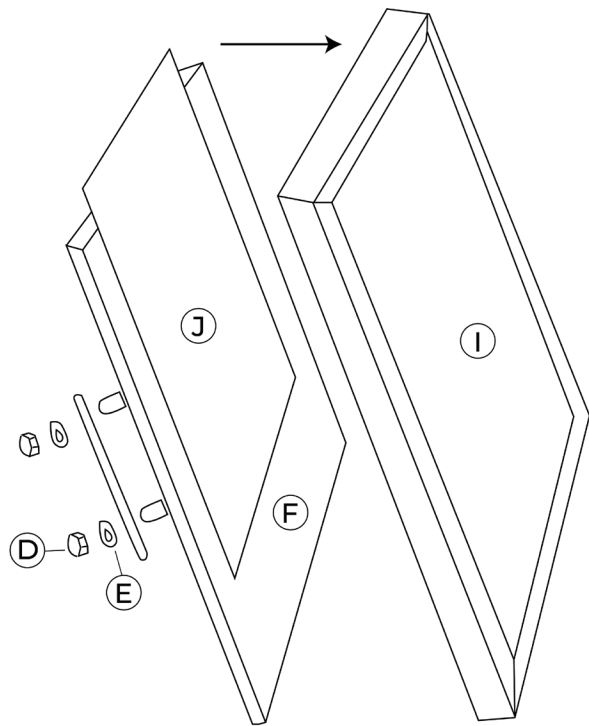

Note: P-7 comes with Neon Markerboard Back Panel for you to create your own menu or sign. Neon markers also included.

Parts Included

| PART LIST | QUANTITY | DESCRIPTION |
|-----------|----------|-------------|
| A | 1 | Screw |
| B | 1 | Base |
| C | 1 | Post |
| D | 4 | Nuts |
| E | 4 | Washers |
| F | 1 | Panel |