



L-Bracket Mounting

Installation Instructions for
Framed Fabric Tackboards

Tools Needed

- Drill
- 1/4" Drill Bit
- Phillips Head Screw Driver
- Level
- Tape Measure
- Pencil
- Safety Gloves
- Safety Goggles

Hardware Needed

- Size 8 Screws
- Drywall Anchors
- Supplied Wall / L-Brackets (2 brackets supplied for every 2' of board)
- Supplied 1/2" self-drilling screws (1 per L-Bracket)


Preparing Your L-Brackets

1. Unbox the product carefully and discard packing materials
2. Locate the provided hardware in the box


Installation

1. Measure from floor to the bottom edge of board. Mark with pencil line the corner location. Measure up from bottom edge of board 1 1/4" and draw line as shown. Locate stud near each end of board and drill pilot holes along line using 1/8" drill bit.
2. Install wall anchors (not supplied) into sheet rock or masonry wall.
3. Install 1 supplied L-bracket, for every two feet of the board, to the wall.
4. Set your board on the installed bottom row of L-brackets. Using a pencil, Draw line along top edge of board.
5. Lift and remove board from the L-brackets. Measure down from your drawn line 1" and draw a line as shown in fig. b.
6. Secure top L-brackets to the wall by repeating step 3.
7. Set board on the bottom L-brackets. Secure board to bottom and top brackets using supplied 1/2" self-drilling screws as shown.
8. Ensure the L-Brackets are secure to the board and wall. (Fig. B)

(Fig. A)

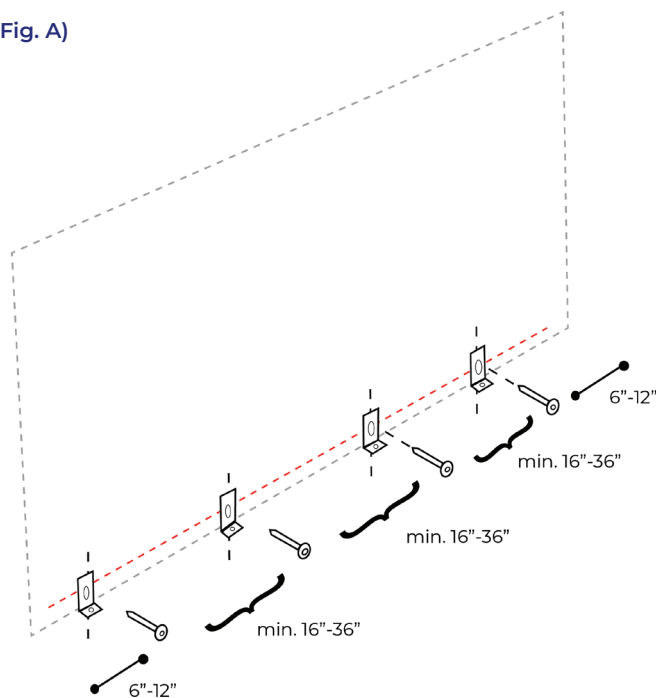

(Fig. B)

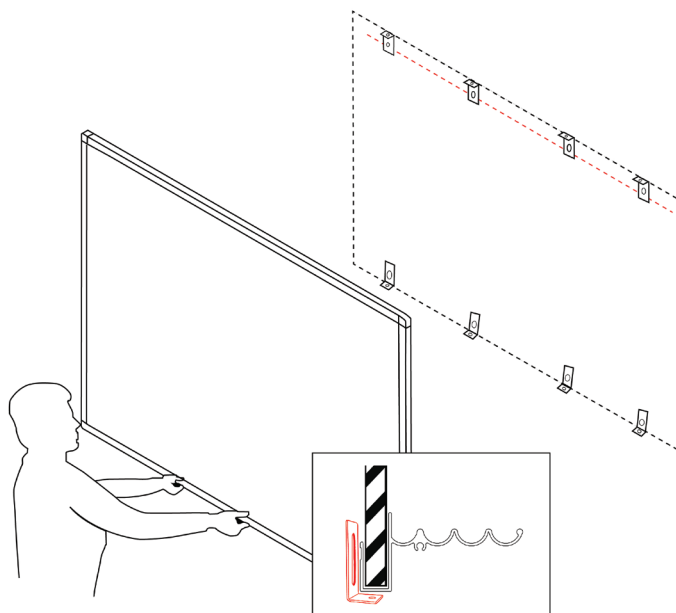

Cleaning Instructions

1. Clean fabric with the foam only of a water-based cleaning agent or with a pure solvent in a well-ventilated room (petroleum distillate-based products, Energine, Carbona, Renuzit, or similar products may be used). Cleaning by professional furniture cleaning serviced only is recommended. To prevent overall soil, frequent vacuuming or light brushing to remove dust and grime is suggested.