



# L-Bracket Mounting

Installation Instructions for  
Porcelain Markerboards

## Tools Needed

---

- Drill
- ¼" Drill Bit
- Phillips Head Screw Driver
- Level
- Tape Measure
- Pencil
- Safety Gloves
- Safety Goggles

## Hardware Needed

---

- Size 8 Screws
- Drywall Anchors
- Wall Brackets (2 Brackets for every 2 feet of board)

## Preparing Your L-Brackets


---

1. Unbox the product carefully and discard packing materials
2. Locate the provided hardware in the box


## Installation

---

(Fig. A)

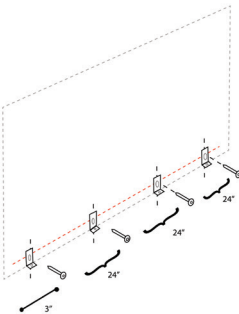

(Fig. B)

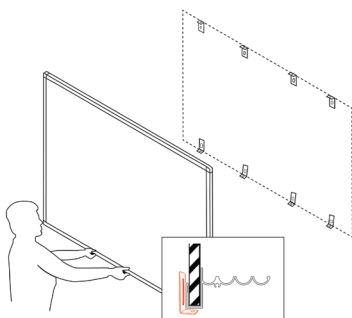

1. Measure from floor to the bottom edge of board. Mark with pencil line the corner location. Measure up from bottom edge of board **1¼"** and draw line as shown. Locate stud near each end of board and drill pilot holes along line using **⅛"** drill bit.
2. Install anchors into **¼"** diameter pre drill holes.
3. Attach **½** the # of angle brackets on the bottom using screws.
4. Set board on the angle brackets. Draw line along top edge of board.
5. Lift and remove board from the angle brackets. Measure down from top line of board **1"** and draw line as shown. Locate stud near each end of board and drill pilot hole along line using **⅛"** drill bit.
6. Secure top angle brackets to the wall using screws as shown. Follow diagram in Step 1. Set board on the bottom angle brackets. **(Fig. A)**
7. Secure board to bottom and top bracket using screws as shown.
8. Ensure the L-Brackets are secure to the product **(Fig. B)**

## Cleaning Instructions

---

- An initial cleaning is recommended with EV-1 or a liquid ammonia added cleaner and rinse with water and wiped dry. The board should be cleaned periodically with the same cleaners. For crayon, scotch tape, etc, use a mild cleaning solvent or paste made with scouring powder and water. Rinse with damp cloth after cleaning.